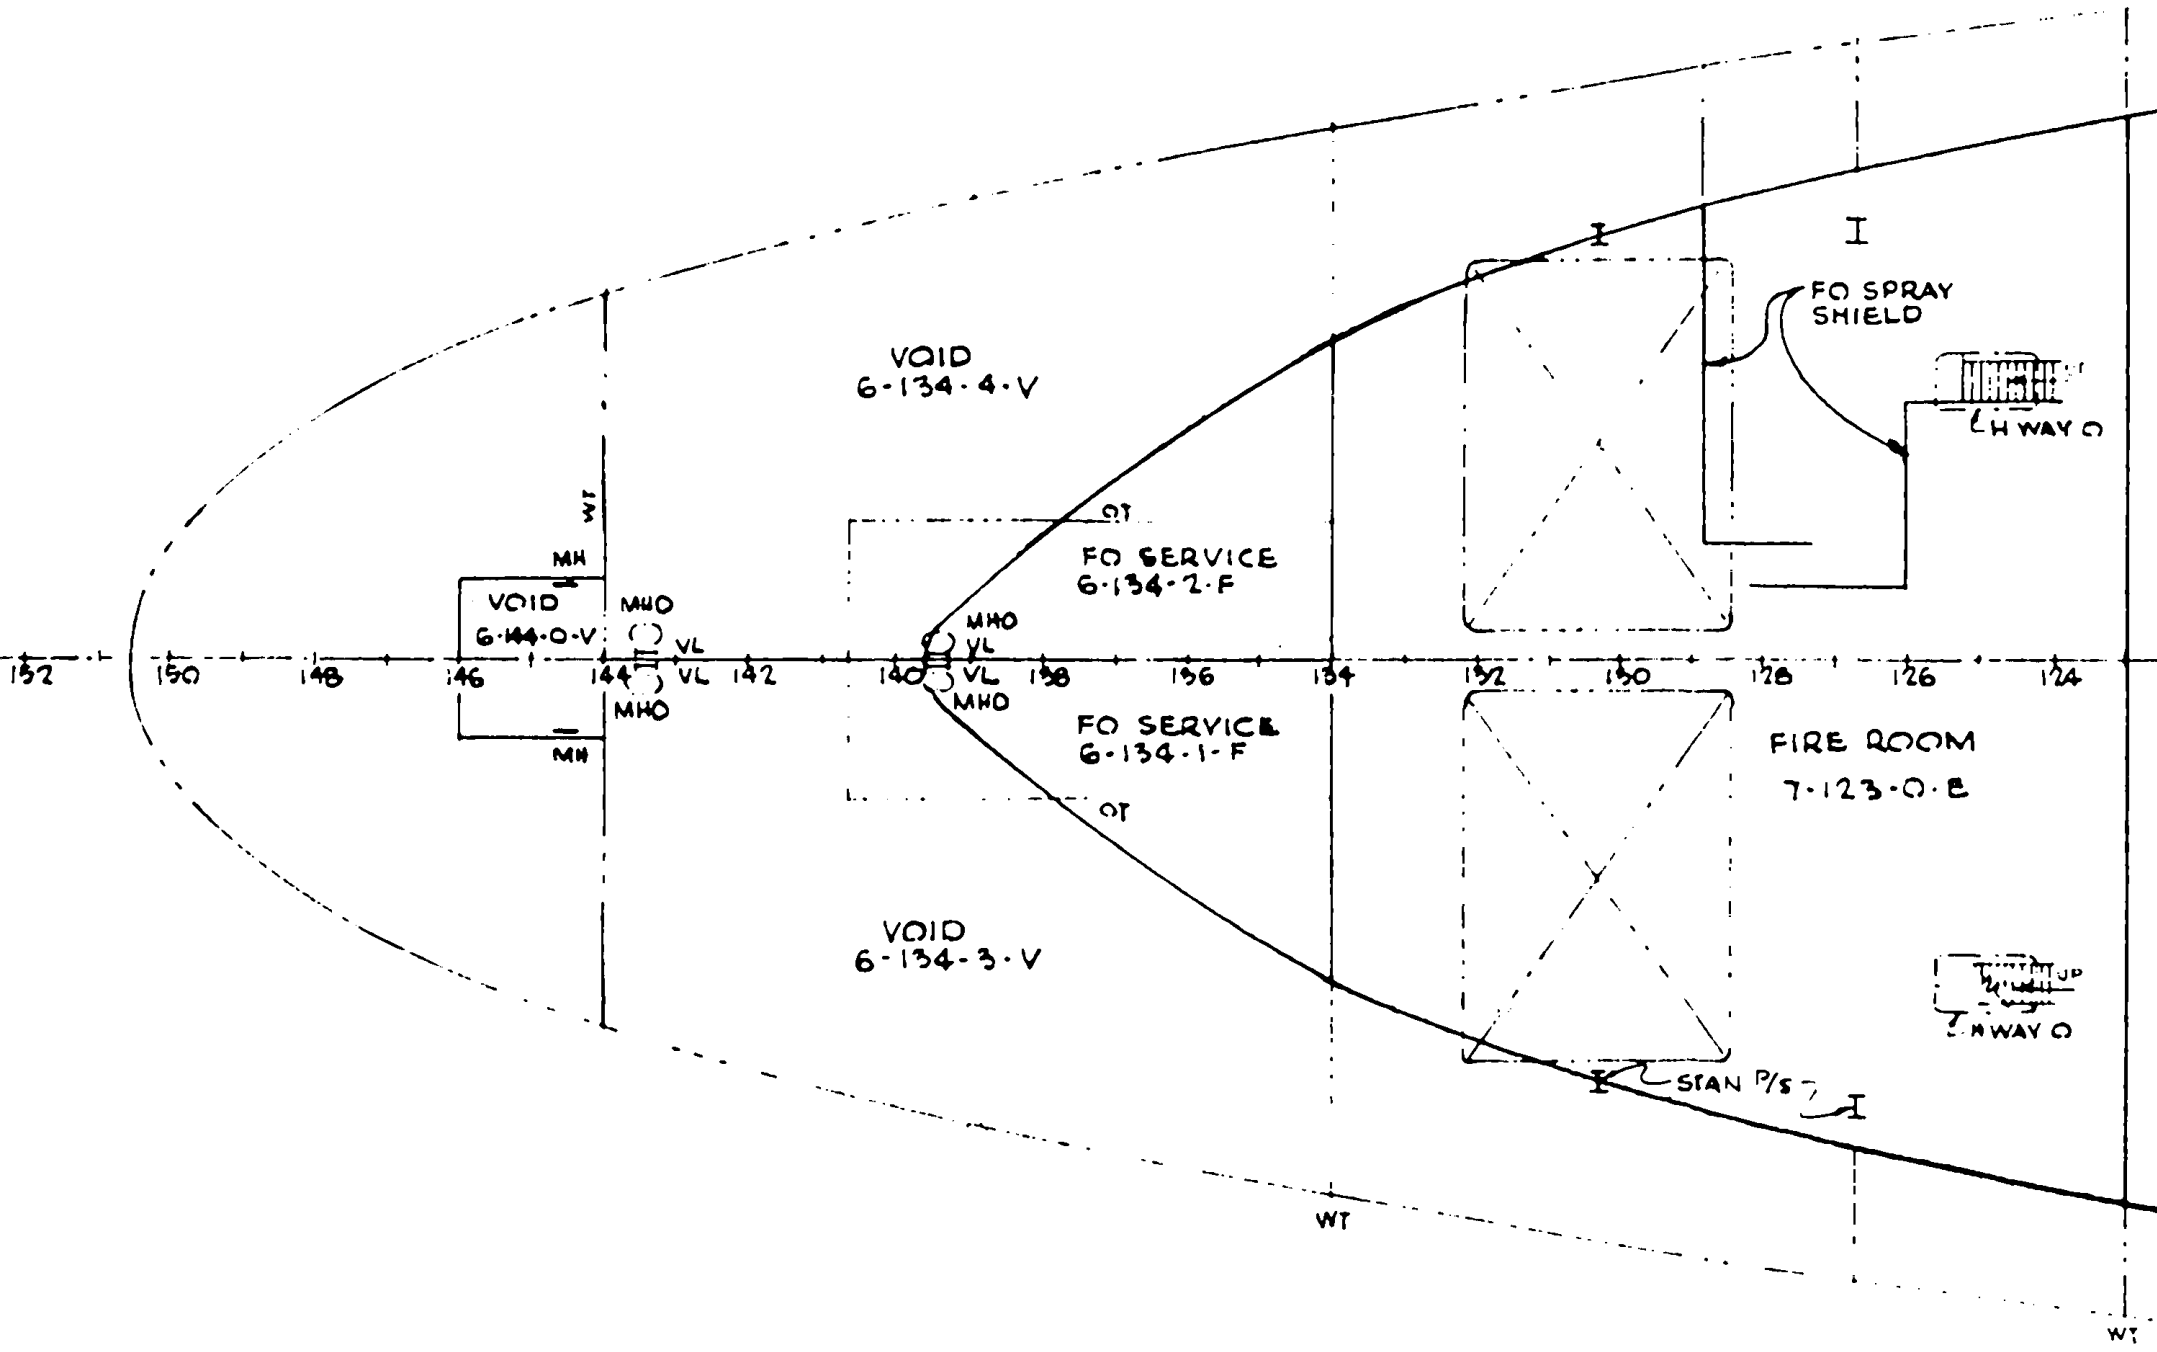
VOID
6·134·4·V
VOID
6·144·0·V
MH
MHO
VL
WT
OT
FO SERVICE
6·134·2·F
FO SERVICE
6·134·1·F
VOID
6·134·3·V
FIRE ROOM
7·123·0·E
FO SPRAY
SHIELD
H WAY O
UP
H WAY O
STAN P/S
152
150
148
146
144
142
140
138
136
134
132
130
128
126
124

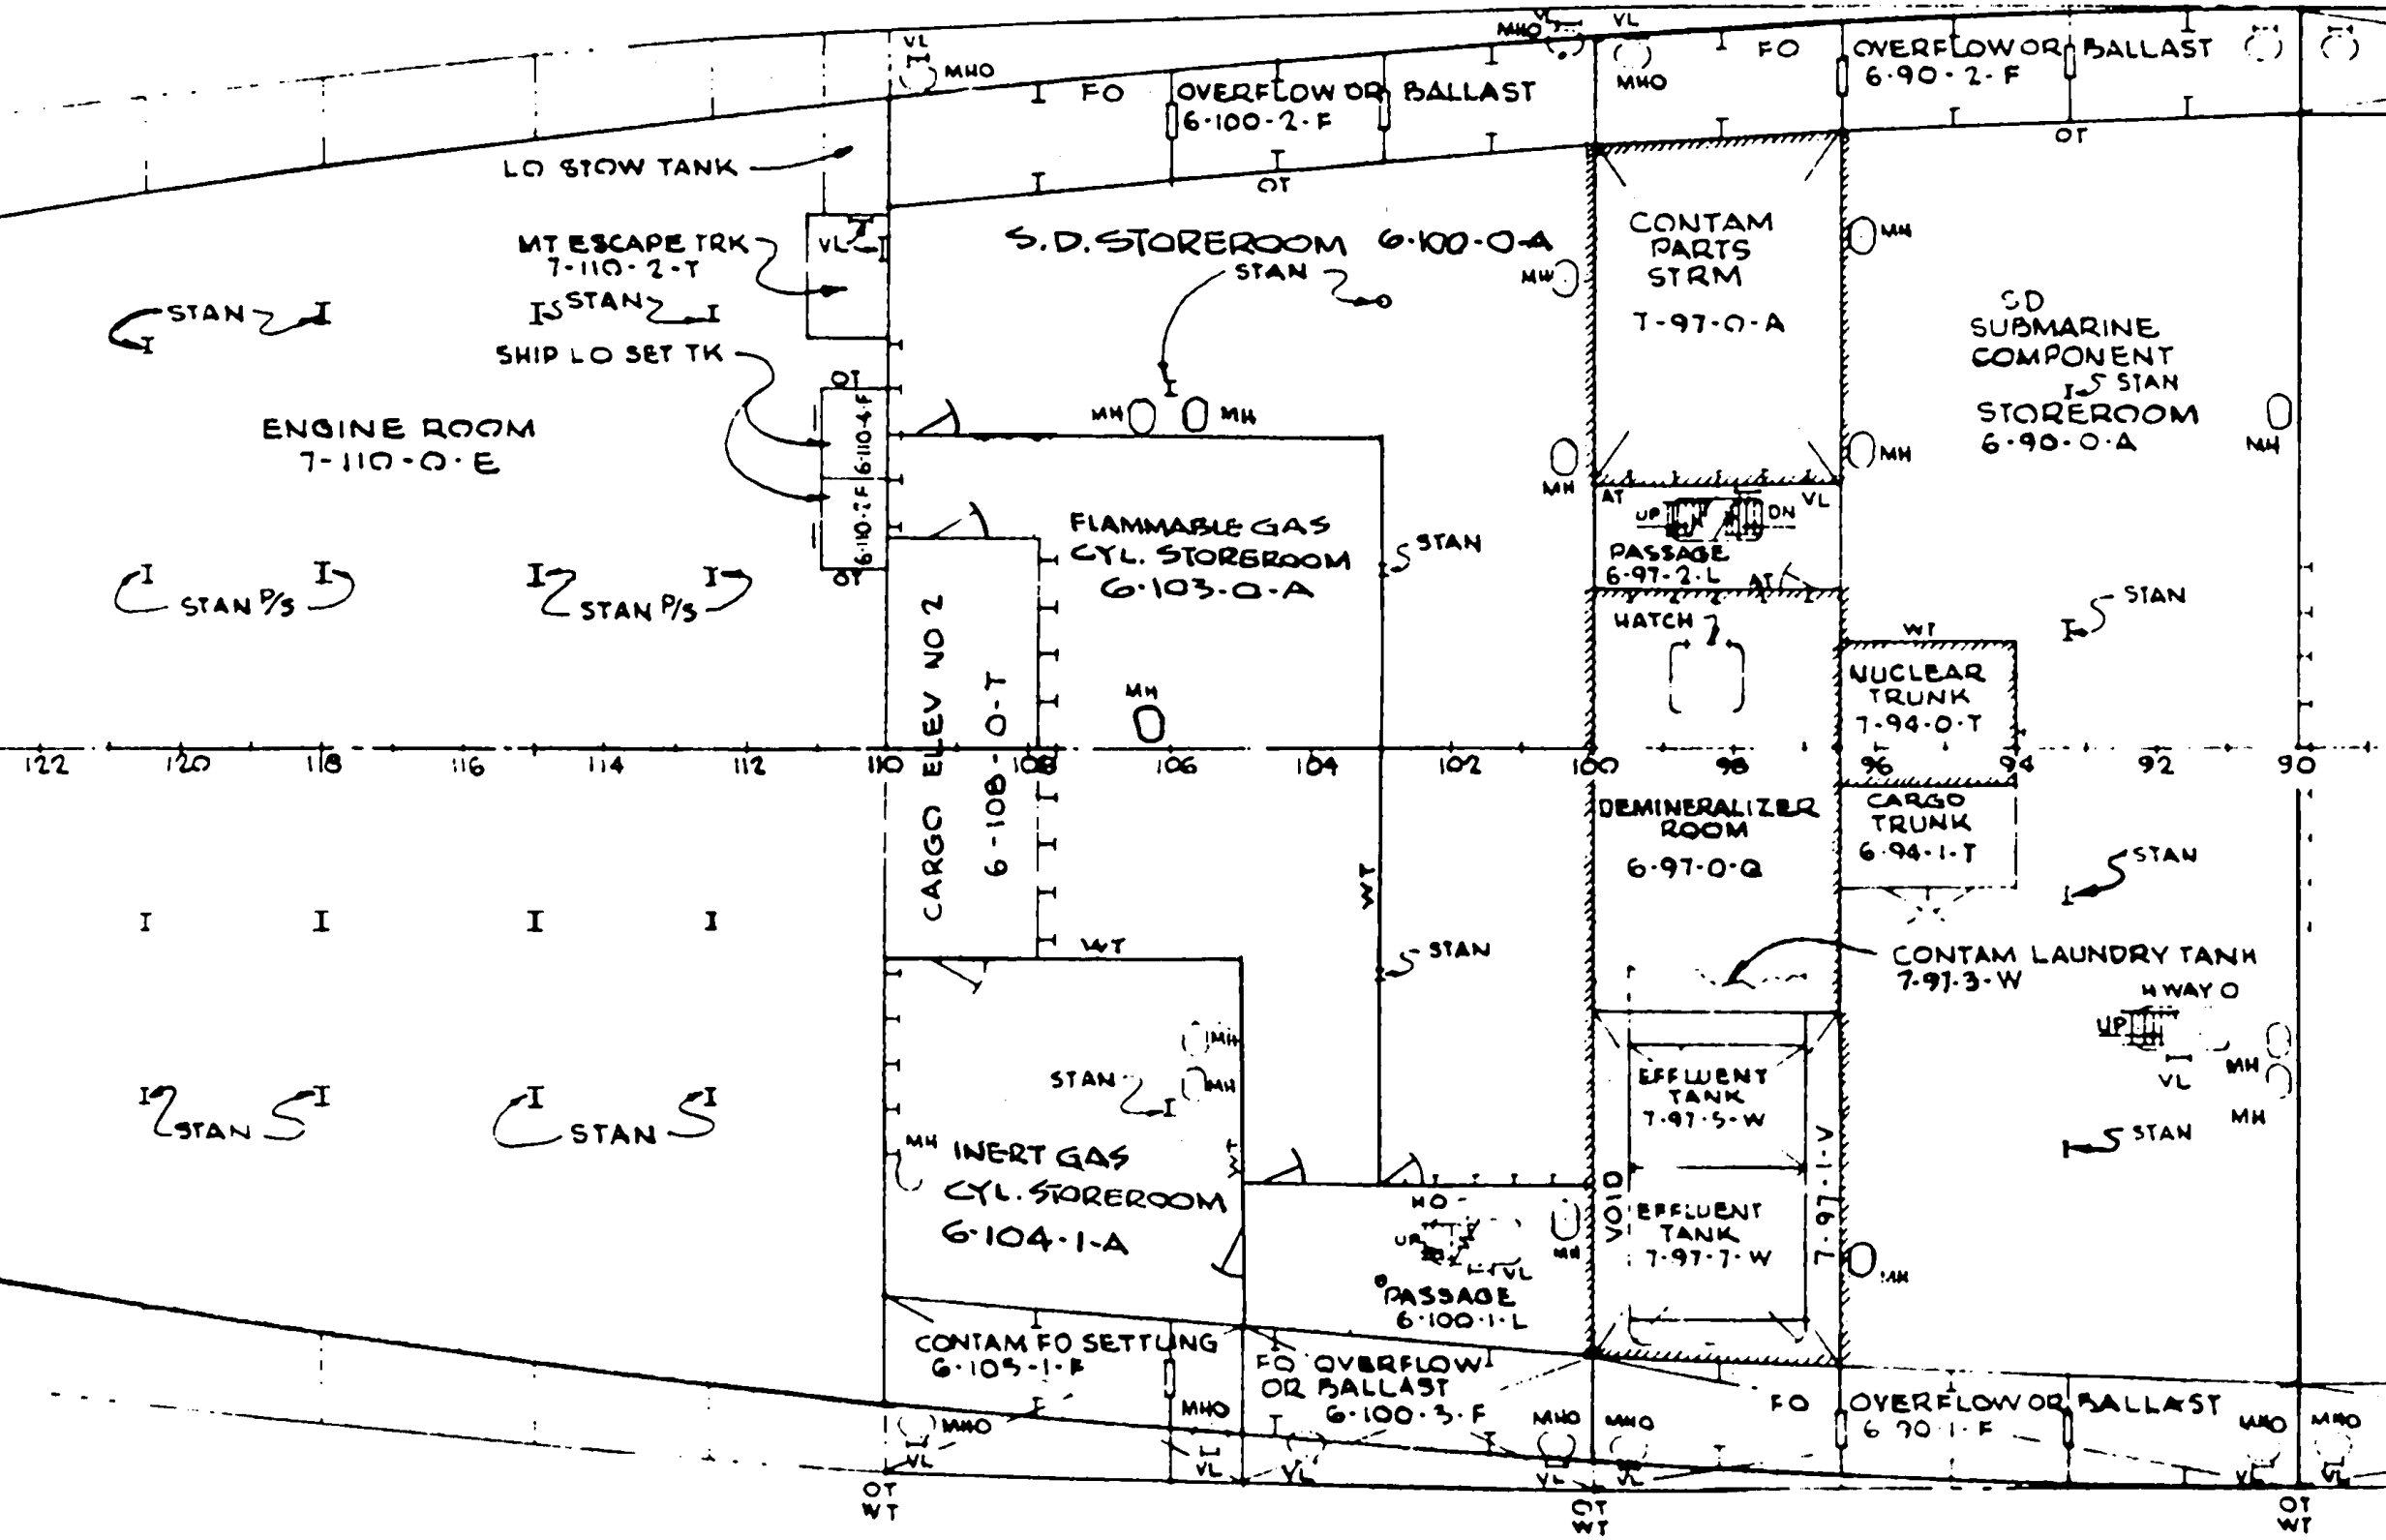

LO STOW TANK
MT ESCAPE TRK
7-110-2-T
STAN
SHIP LO SET TK
ENGINE ROOM
7-110-0-E
STAN P/S
STAN P/S
STAN
STAN
FO
OVERFLOW OR BALLAST
6-100-2-F
OT
S.D. STOREROOM 6-100-0-A
STAN
MH
6-110-4-F
6-110-2-F
FLAMMABLE GAS
CYL. STOREROOM
6-103-0-A
CARGO ELEV NO 2
6-108-0-T
WT
INERT GAS
CYL. STOREROOM
6-104-1-A
CONTAM FO SETTLING
6-105-1-F
FO OVERFLOW
OR BALLAST
6-100-3-F
PASSAGE
6-100-1-L
MHO
VL
CONTAM
PARTS
STRM
7-97-0-A
PASSAGE
6-97-2-L
UP
DN
AT
HATCH
DEMINERALIZER
ROOM
6-97-0-Q
EFFLUENT
TANK
7-97-5-W
EFFLUENT
TANK
7-97-7-W
VOID
7-97-1-V
OVERFLOW OR BALLAST
6-90-2-F
SD
SUBMARINE
COMPONENT
STOREROOM
6-90-0-A
NUCLEAR
TRUNK
7-94-0-T
CARGO
TRUNK
6-94-1-T
CONTAM LAUNDRY TANK
7-97-3-W
H WAY O
OVERFLOW OR BALLAST
6-90-1-F
122
120
118
116
114
112
110
108
106
104
102
100
98
96
94
92
90
OT
WT

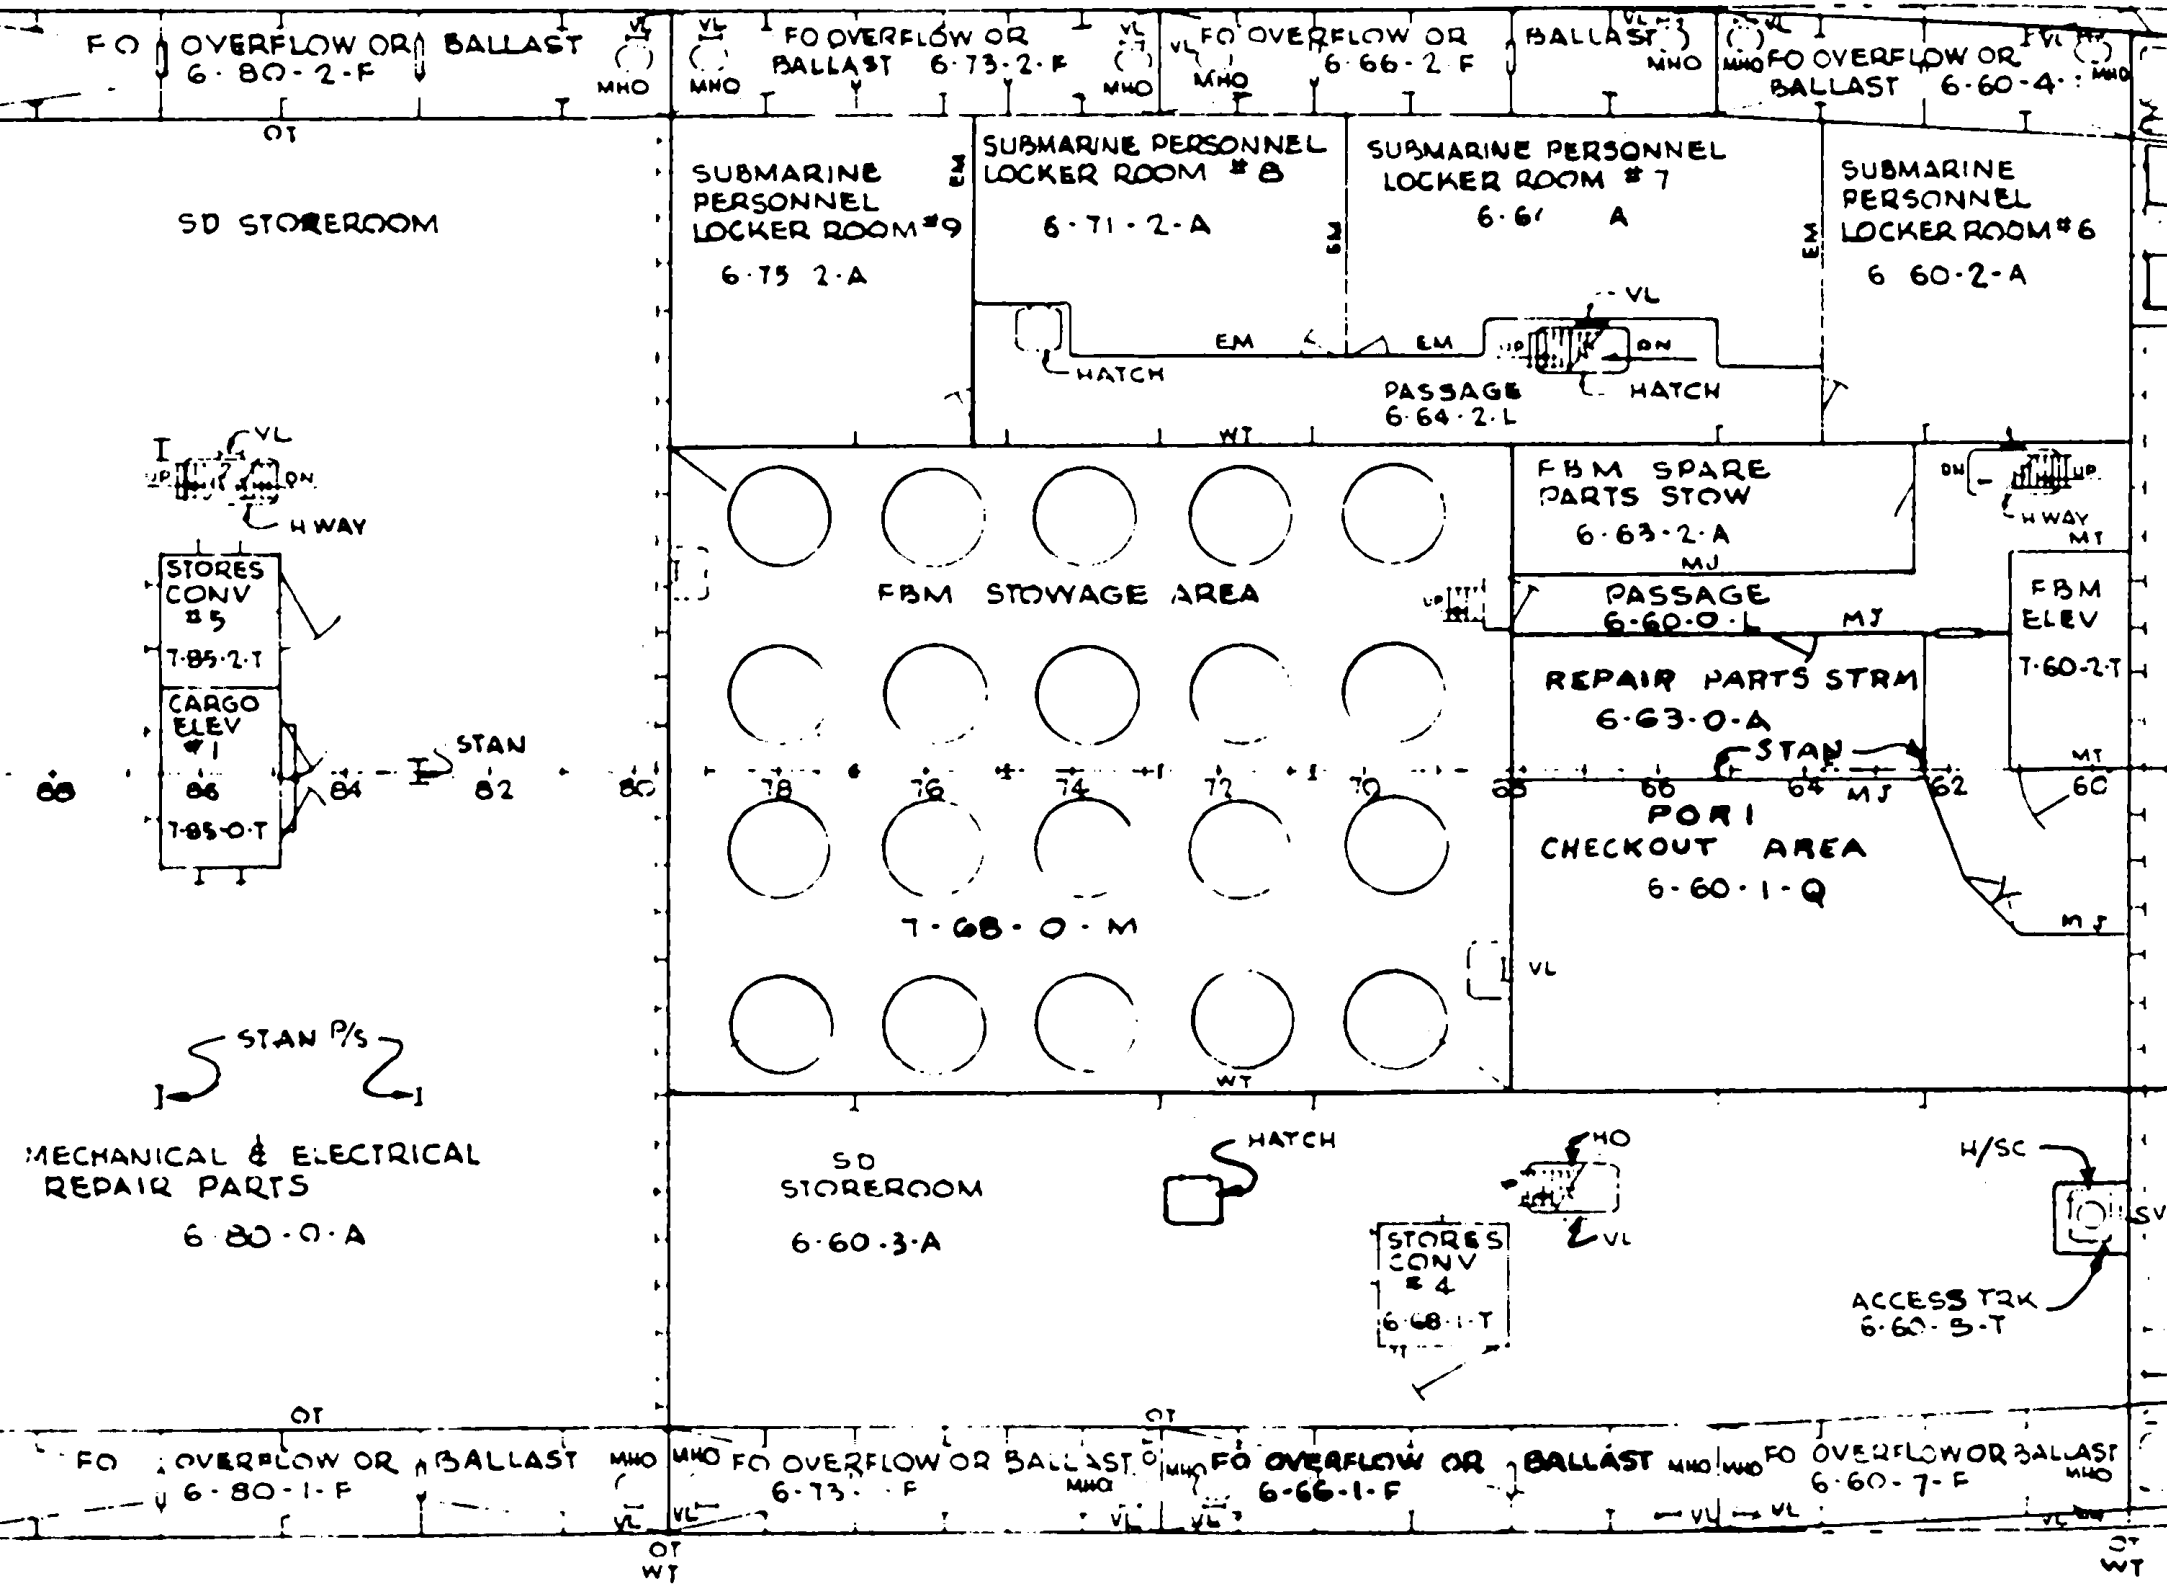
FO OVERFLOW OR BALLAST
6-80-2-F
MHO
VL
FO OVERFLOW OR BALLAST 6-73-2-F
FO OVERFLOW OR
6-66-2-F
BALLAST
FO OVERFLOW OR BALLAST 6-60-4-
OT
SD STOREROOM
SUBMARINE PERSONNEL LOCKER ROOM #9
6-75-2-A
SUBMARINE PERSONNEL LOCKER ROOM #8
6-71-2-A
SUBMARINE PERSONNEL LOCKER ROOM #7
6-6 A
SUBMARINE PERSONNEL LOCKER ROOM #6
6-60-2-A
EM
HATCH
PASSAGE
6-64-2-L
UP
DN
WT
HWAY
FBM SPARE PARTS STOW
6-63-2-A
MJ
FBM STOWAGE AREA
PASSAGE
6-60-0-L
REPAIR PARTS STRM
6-63-0-A
FBM ELEV
7-60-2-T
MT
STORES CONV #5
7-85-2-T
CARGO ELEV #1
86
7-85-0-T
STAN
88
84
82
80
78
76
74
72
70
68
66
64
62
60
POR I CHECKOUT AREA
6-60-1-Q
7-68-0-M
STAN P/S
MECHANICAL & ELECTRICAL REPAIR PARTS
6-80-0-A
SD STOREROOM
6-60-3-A
HO
STORES CONV #4
6-68-1-T
H/SC
SV
ACCESS TRK
6-60-5-T
FO OVERFLOW OR BALLAST
6-80-1-F
FO OVERFLOW OR BALLAST
6-73- F
FO OVERFLOW OR BALLAST
6-66-1-F
FO OVERFLOW OR BALLAST
6-60-7-F
OT WT

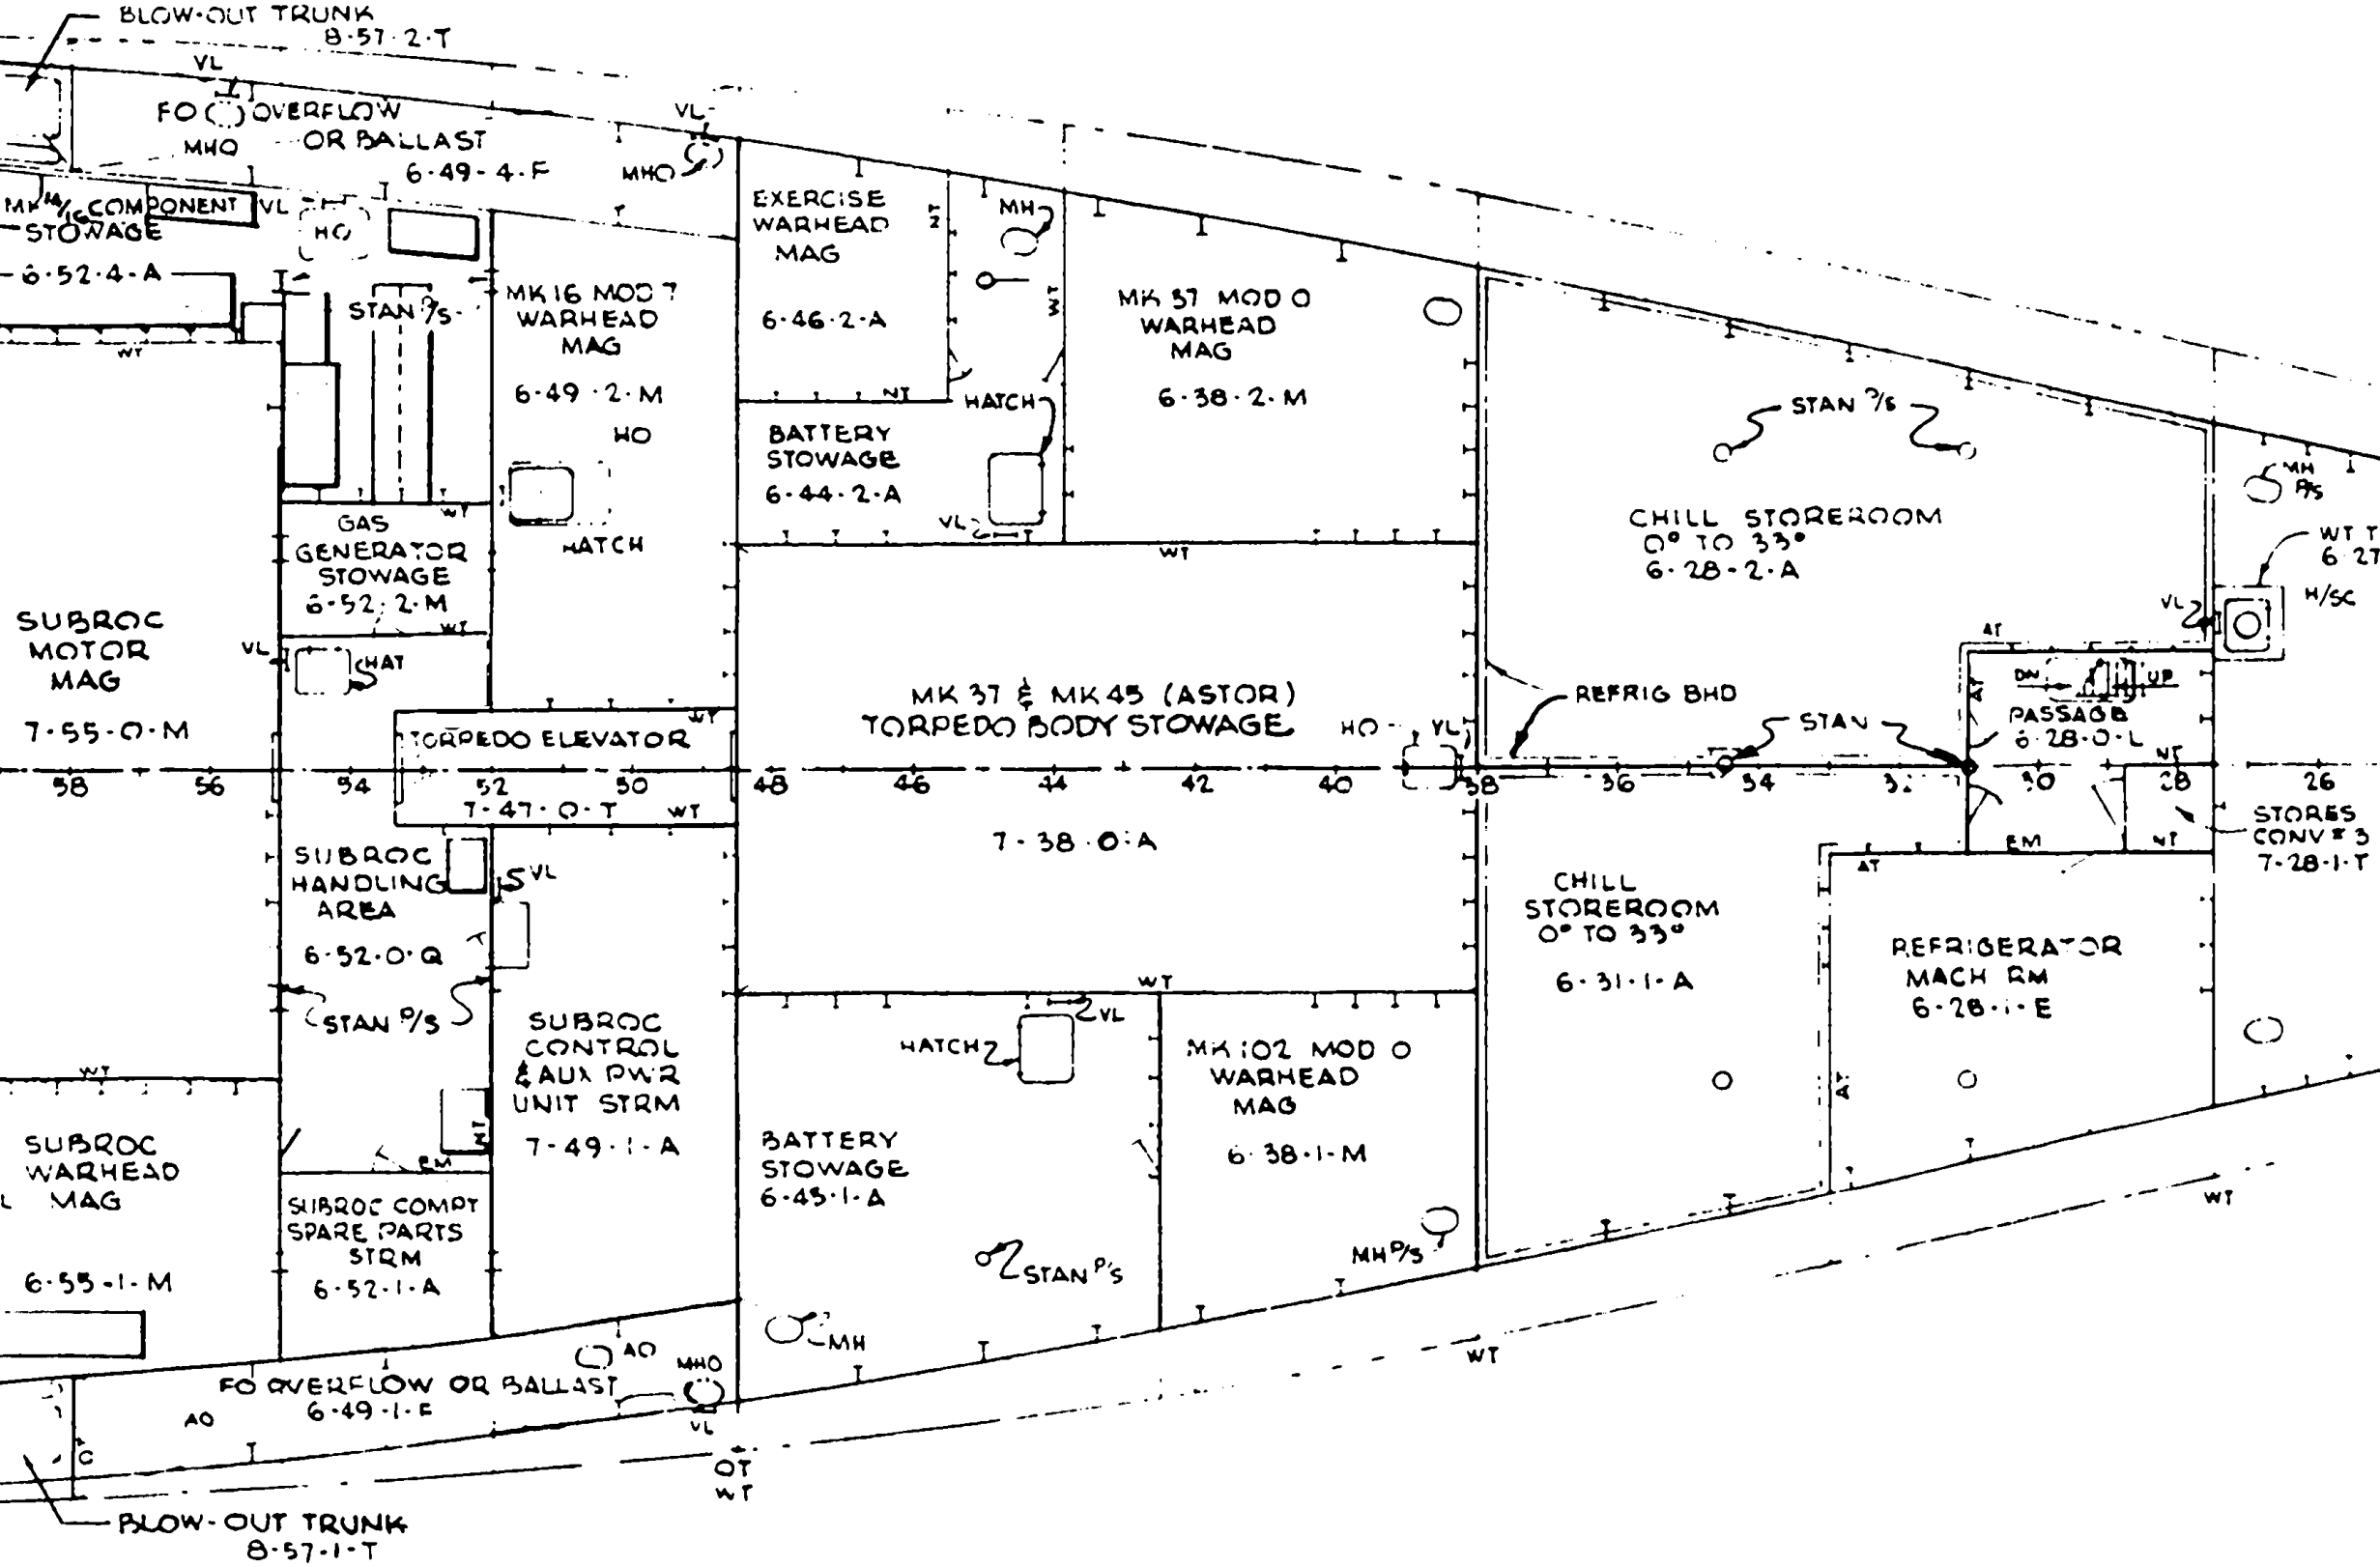
BLOW-OUT TRUNK
8-57-2-T
FO OVERFLOW OR BALLAST
6-49-4-F
MHO
VL
MK 14/16 COMPONENT STOWAGE
6-52-4-A
HO
STAN P/S
MK 16 MOD 7 WARHEAD MAG
6-49-2-M
HO
HATCH
EXERCISE WARHEAD MAG
6-46-2-A
MH
BATTERY STOWAGE
6-44-2-A
HATCH
MK 37 MOD 0 WARHEAD MAG
6-38-2-M
WT
CHILL STOREROOM
0° TO 33°
6-28-2-A
STAN P/S
MH P/S
WT T
6-27
H/SC
SUBROC MOTOR MAG
7-55-0-M
GAS GENERATOR STOWAGE
6-52-2-M
HAT
TORPEDO ELEVATOR
7-47-0-T
MK 37 & MK 45 (ASTOR) TORPEDO BODY STOWAGE
7-38-0-A
HO
REFRIG BHD
STAN
AT
DN
UP
PASSAGE
6-28-0-L
58
56
54
52
50
48
46
44
42
40
38
36
34
32
30
28
26
STORES CONV # 3
7-28-1-T
SUBROC HANDLING AREA
6-52-0-Q
STAN P/S
SUBROC CONTROL & AUX PWR UNIT STRM
7-49-1-A
CHILL STOREROOM
0° TO 33°
6-31-1-A
REFRIGERATOR MACH RM
6-28-1-E
EM
HATCH
BATTERY STOWAGE
6-45-1-A
STAN P/S
MK 102 MOD 0 WARHEAD MAG
6-38-1-M
MH P/S
SUBROC WARHEAD MAG
6-55-1-M
SUBROC COMPT SPARE PARTS STRM
6-52-1-A
AO
MHO
MH
FO OVERFLOW OR BALLAST
6-49-1-F
OT
WT
BLOW-OUT TRUNK
8-57-1-T

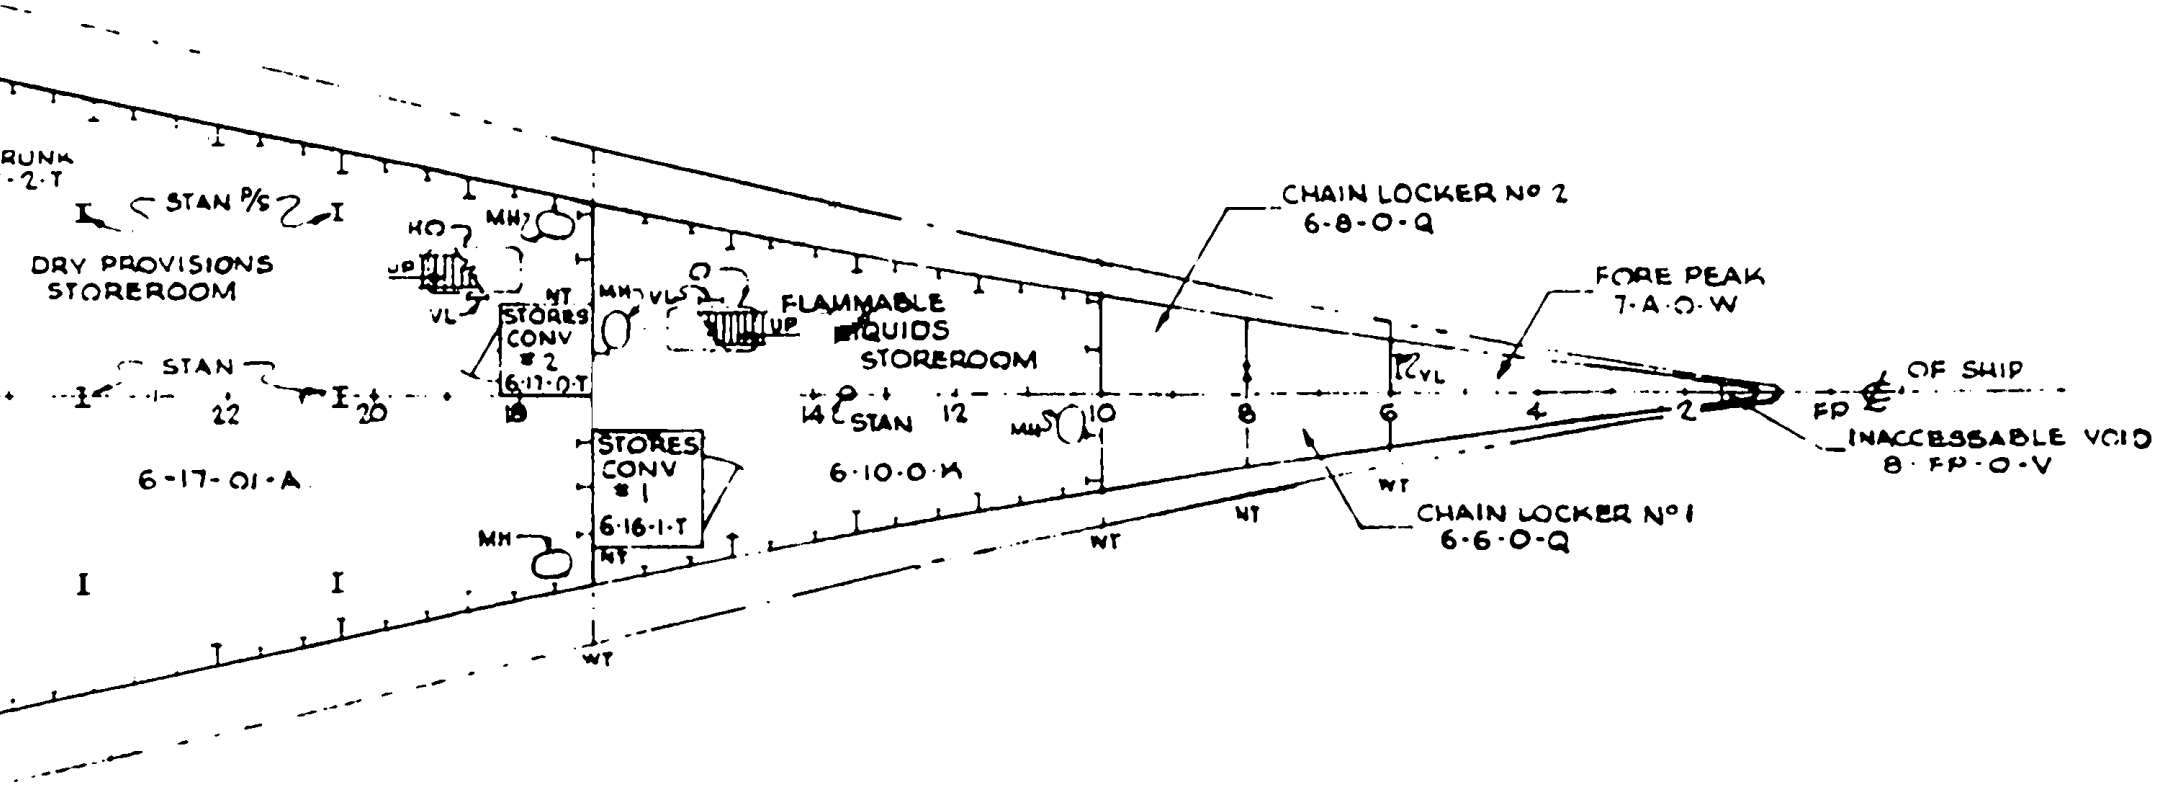
RUNK
·2·T
STAN P/S
DRY PROVISIONS STOREROOM
HO
MH
UP
VL
NT
STORES CONV #2 6-17-0-T
MH
VL
UP
FLAMMABLE LIQUIDS STOREROOM
CHAIN LOCKER Nº 2
6-8-0-Q
FORE PEAK
7-A-0-W
VL
℄ OF SHIP
STAN
22
20
18
14
STAN
12
MH
10
8
6
4
2
FP
INACCESSABLE VOID
8-FP-0-V
6-17-01-A
STORES CONV #1 6-16-1-T
NT
6-10-0-K
WT
MH
WT
NT
CHAIN LOCKER Nº 1
6-6-0-Q
WT

AS 34-845-2105517

SECOND PLATFORM

SCALE 1/16"=1'-0"

PLATE 14 OF 17